

Ref: TT0015
V1.2

MDR - Local Mode Login Details

Related Products - MDR-Dashboard 6.0 with MDR 600, MDR 500 & MDR 400 Series Recorders

Full details of these login details can be found in Section **9.5 (MDR 600 & MDR 500)** and/or **8.4 (MDR 400) Loading from HDD/SD** in the **Installation and Operation Guides**.

When connecting the Mobile Caddy Unit (MCU), [aka Hard Disk Drive (HDD) or Solid State Drive (SSD)], ensure the correct Brigade USB cable is used and both ends of the USB-A are plugged into the PC. This needs connecting before opening the MDR-Dashboard 6.0 software. If it is not possible to connect both USB-A make sure it is the main, thicker cable is connected. *The MCU Reader is required for the MDR-641.*




MDR-644 & MDR 500



MDR 400

Once connected, the MDR-Dashboard can be opened by double clicking on the short cut icon for **MDR 600 & MDR 500** or right clicking on the icon and selecting **Run as Administrator** for **MDR 400**. In the top dropdown **Mode** box select **Local**, in the **Username** box type **admin** (*all letters in lowercase*), leave the **Password** box blank.

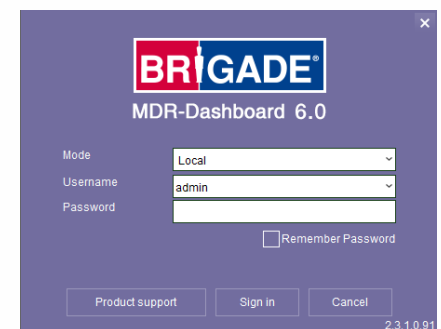

Those new to the MDR-Dashboard 6.0, can click on the **Product Support** button to view the **MDR Tutorial Videos**, on the Brigade website, before clicking **Sign in**. Alternatively, click on the **MDR Tutorial Videos** desktop icon.

*The current MDR 600 **Installation and Operation Guide** can be found on the website in **PRODUCT SUPPORT** > [open link](#) - then click in the User Manual tab.*

or

*For the MDR 500 the current **Installation and Operation Guide** can be found on the website in **PRODUCT SUPPORT** - [open link](#) – then click in the User Manual tab.*

or

*For the MDR 400 the current **Installation and Operation Guide** can be found on the website in **PRODUCT SUPPORT** - [open link](#) – then click in the User Manual tab.*

Where to find this and other Tech Tips on the website

