

### Related Products – All MDR-641 Models

There have been instances where the MDR-641 has not been recording footage. After initial investigations it was discovered that the Mobile Digital Recorder (MDR) was unlocked, therefore not powered. This is largely due to the differences between the MDR-641 and the MDR-644, as well as previous models.

As you can see from the first image, the MDR-641 unlocked position (powered off) is to the left and the key needs to be turned clockwise, a quarter turn, to lock. This also powers the MDR.



Alternatively, on the MDR-644, and previous models (MDR-500, MDR-400 & MDR-300), the units unlocked position (powered off) is to the right and the key need to be turned anticlockwise, a quarter turn, to lock. This also powers the MDR.



Where to find this and other Tech Tips on the website

