


MDR - New Password explanation

Related Products - MDR-644 & MDR 641 and MDR-508.

To comply with Cybersecurity regulations (RED EN 18031), versions MDR644_M04.526_V3.5.10_RC25103060, MDR641_M04.526_V3.5.10_RC25102060 & MDR-508_V231_T260123.04_M0526_FS5.0 firmware for the MDR-644, MDR-641 and MDR-508 now give a mandatory prompt for the user to choose a new password on first login which meets the minimum complexity requirements.

Criteria for new password:

- Must be 8-16 characters.
- Must include numbers, upper & lower-case letters.
- The special characters can be used but not required. The special characters which can be used are: @#\$%^&*()_+-=[{}1;:.,<>?!]

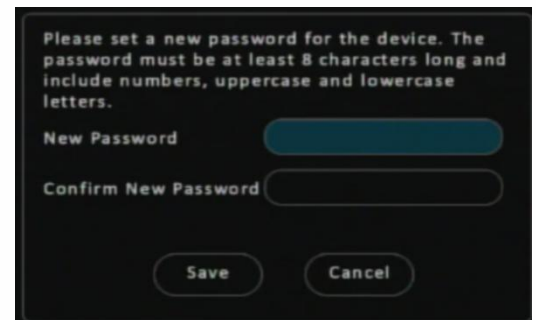

Further details are provided on Page 16, section 4.2 of the Installation and Operation Guide to set the password of the MDR-644 and MDR-641.

Further details are provided on Page 16, section 4.2 of the Installation and Operation Guide to set the password of the MDR-508.

It is the responsibility of person installing the MDR to communicate the new password to the end user however in the event of a lost password Brigade can provide support. In these cases, please contact Technical Support via technical@brigade-electronics.com or call the technical support helpline on 01322 420 347.

Where to find this and other Tech Tips on the website

