



Brigade

How to setup a mirror image on the MDR-500 series

Version 1.0 – Oluwatayo. B


Overview

This guide is designed to explain:

- How to access the MDR setup.
- How to change a normal image to a mirror view on the MDR-500 series.
- How to save the modified changes.



How to Login to the MDR Setup menu **Brigade**

- To login to your MDR you will need to insert your USB wired mouse in the USB port in the front of the MDR.
- Using your mouse, right click anywhere on the monitor's display and a menu bar will appear along the bottom of the screen.
- Click on the icon of a person  in the bottom right of the screen to open the login page.





How to Login to the MDR Setup menu

- Login as administrator mode
- Enter your password
- Select your preferred language

Note: if you have forgotten your password, contact Technical Support


- Click on  to open setup.

Brigade

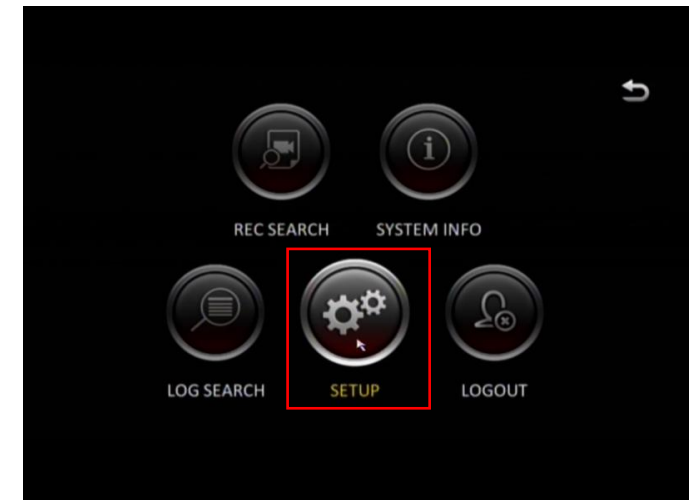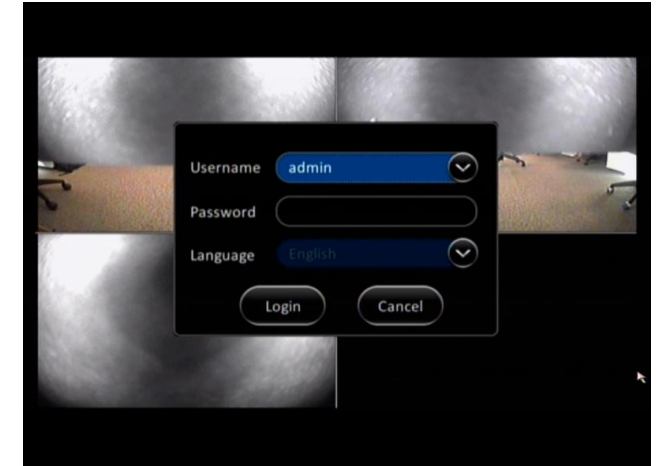

How to change normal view to mirror view


- Click on Surveillance
- Click on Live view on the left-hand side
- Click on preview
- Click on Image setup

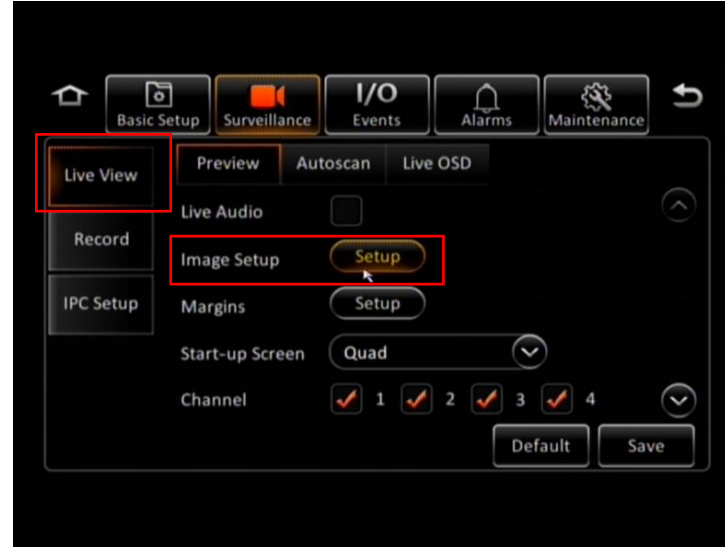


Brigade



How to change normal view to mirror view

- Select the preferred camera channel.
- Click on the arrows  depending if you require upside down or mirror view.
- There is also a feature where you can copy the settings to all camera channels by clicking on copy and selecting copy to All.

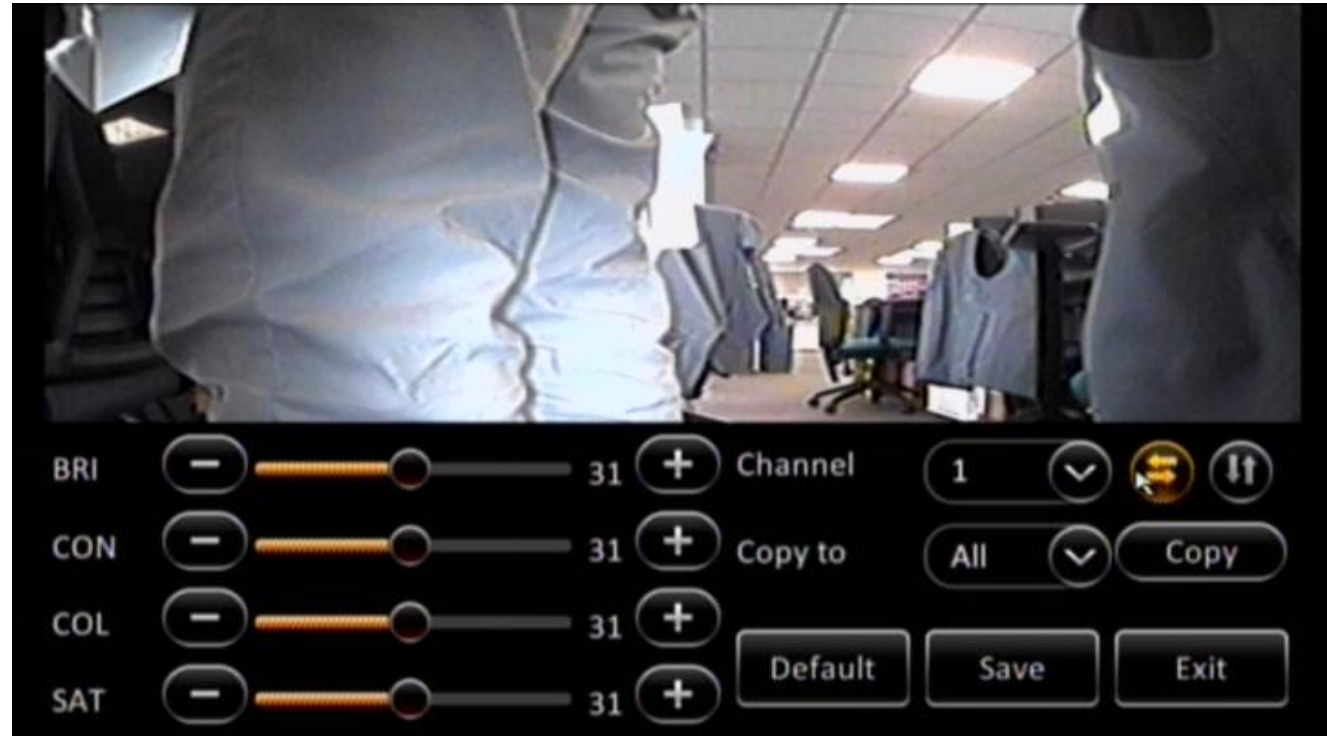- Make sure you save successfully before exiting the settings.



Saving your new setting

- Once you have made all the necessary adjustment to the setting, click **Save** and you will see a pop-up box confirming Saved successfully.



Contact Us



Brigade Electronics Group Plc.

Brigade House, The Mills, Station Road

South Darenth, Kent DA4 9BD, United Kingdom

Sales and Customer Services: +44 (0) 1322 420300

Technical Support: +44 (0) 1322 420347

www.brigade-electronics.com