

Ref: TT0037  
V1.1

## MDR - Disabling the Video Loss alarm Buzzer

### Related Products - Mobile Digital Recorder MDR 600 Series and MDR 500 Series


When the Mobile Digital Recorder (MDR) emits a constant high-pitched tone from the internal **Buzzer**, it signifies an alarm has been activated. The **Buzzer** for these alarms can be disabled for diagnosis purposes, or while making changes to the MDR configuration.

The **Video Loss** alarm is enabled by default. This can be disabled but this is not recommended as it will not alert the user to a loss of video signal, nor is the alarm shown on the recording. However, the **Alarm Link Buzzer** only can be disabled.

To disable the **Alarm Link Buzzer** please follow the steps below:

- Connect a USB mouse to the MDR. Log in with the username and password.
- Click **SETUP** from the menu.
- Click on **Alarm** tab, then **Video**.
- Click **Setup** under **Alarm Link**.
- Scroll down and untick the **Buzzer** box.
- Click **OK** and then **Save**.
- Exit the **SETUP** menu.

It is recommended that the buzzer is re-enabled (box ticked) once the issue has been resolved.

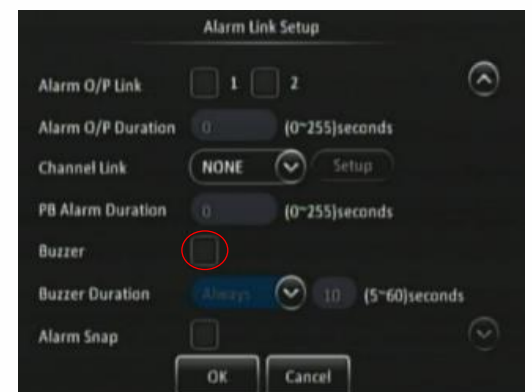

Full details of this can be found in section **5.4 Alarms (MDR 600)** click [here](#) or **7.4 Alarms (MDR 500)** click [here](#), of the current **Installation and Operation Guides**.

Where to find this and other Tech Tips on the website

